


PDL MicroDrive Elite / UltraDrive Elite

VFD Terminals	
T13	Run Signal
T15	Auto Restart
T17	Preset Speed Select
T19	Motor PTC (Presco Shutdown)
T26	Speed Adjust Potentiometer Input
T1/T2/T3	Relay 1 VFD Fault
T4/T5	Relay 2 START Command
T6/T7	Relay 3 RUN

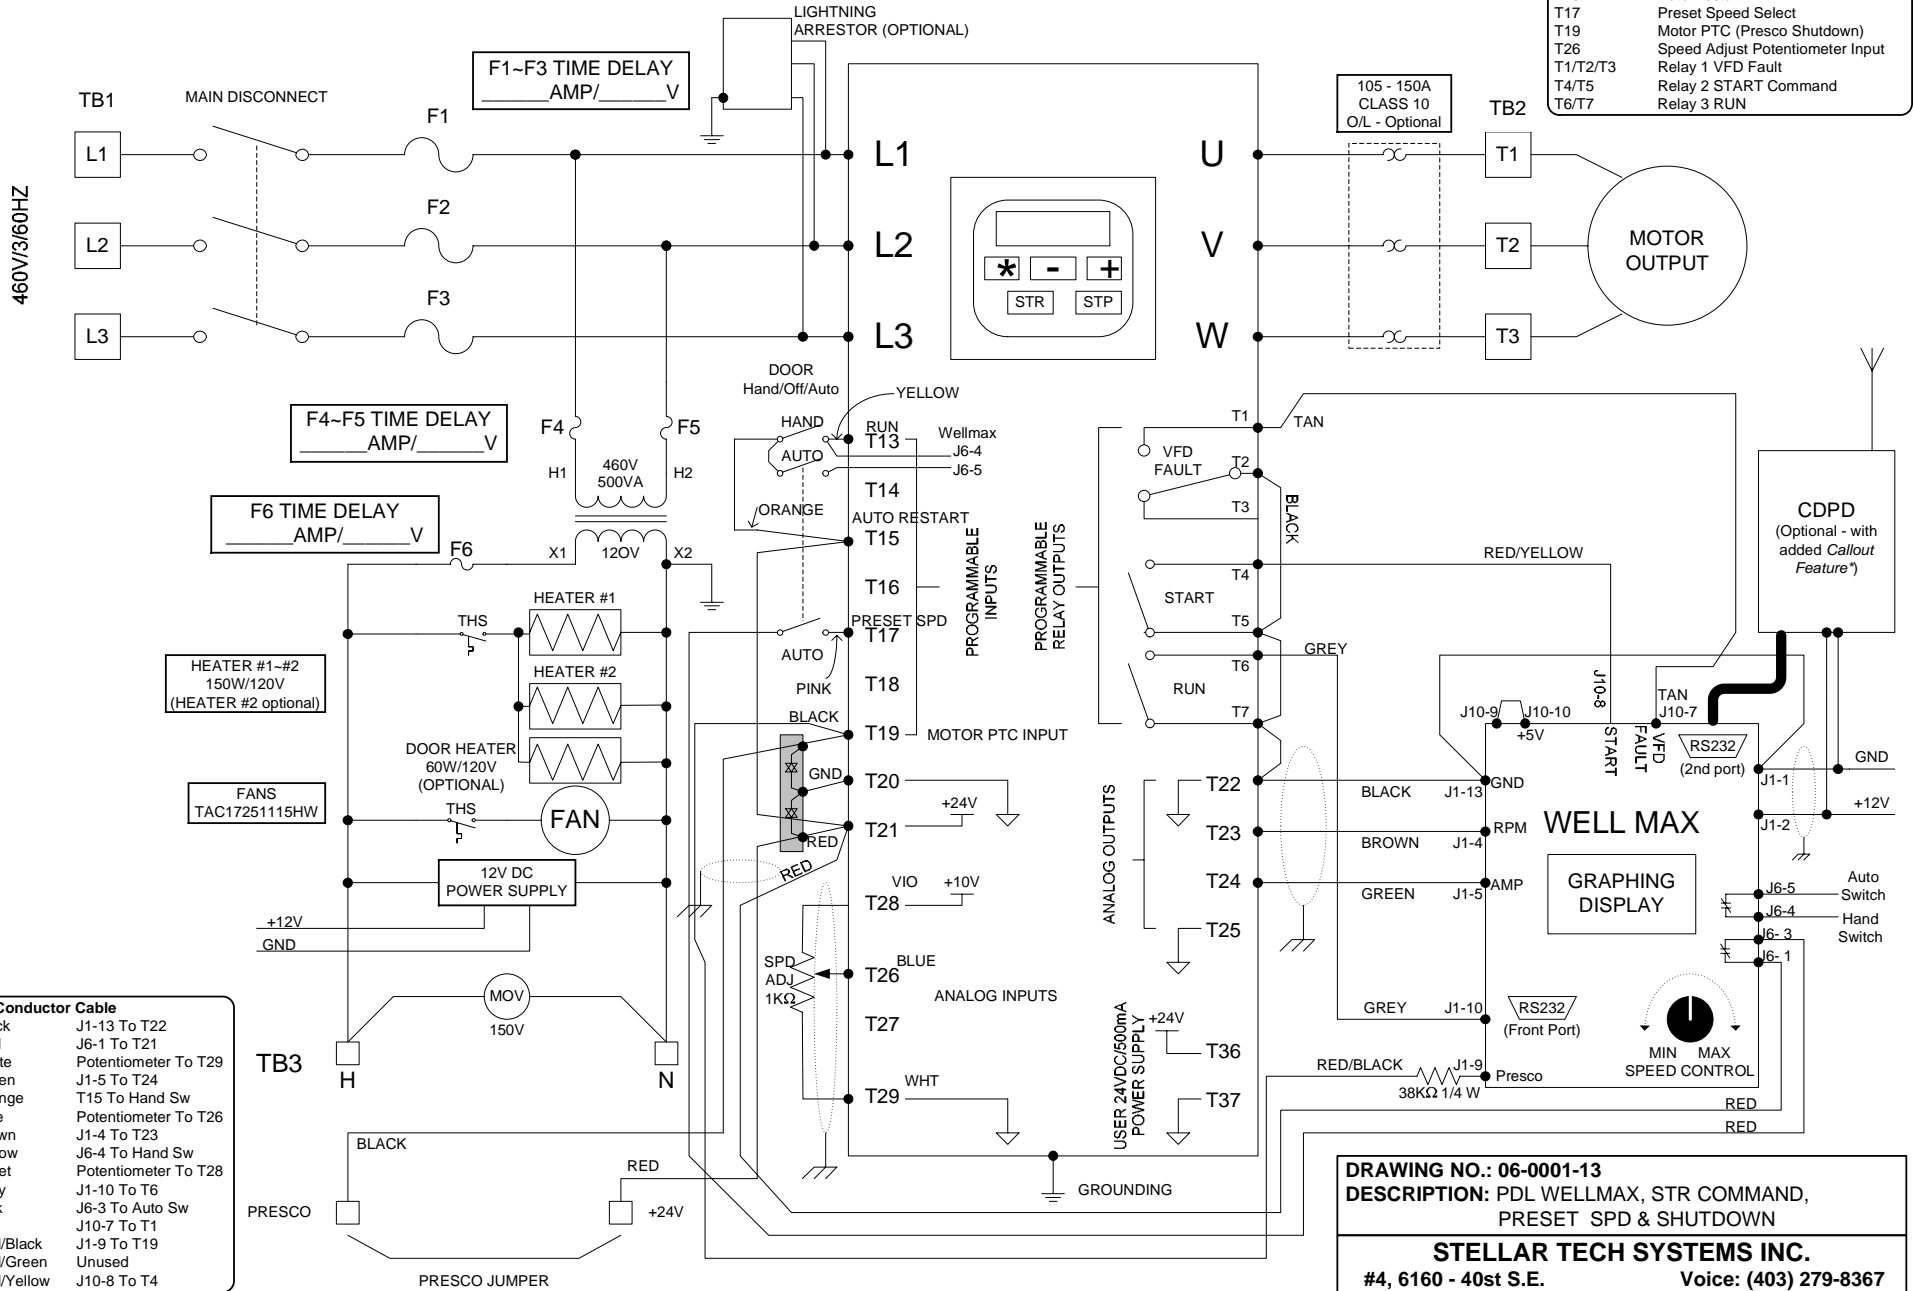

15 Conductor Cable	
Black	J1-13 To T22
Red	J6-1 To T21
White	Potentiometer To T29
Green	J1-5 To T24
Orange	T15 To Hand Sw
Blue	Potentiometer To T26
Brown	J1-4 To T23
Yellow	J6-4 To Hand Sw
Violet	Potentiometer To T28
Gray	J1-10 To T6
Pink	J6-3 To Auto Sw
Tan	J10-7 To T1
Red/Black	J1-9 To T19
Red/Green	Unused
Red/Yellow	J10-8 To T4

DRAWING NO.: 06-0001-13
DESCRIPTION: PDL WELLMAX, STR COMMAND, PRESET SPD & SHUTDOWN

STELLAR TECH SYSTEMS INC.
 #4, 6160 - 40st S.E. Voice: (403) 279-8367
 Calgary, Alberta T2C 1Z3 Fax: (403) 279-8368